

WEAR PARTS

Note: unless otherwise noted the listed parts are not covered by warranty.
VERSION 2.0 DATE: 01-2024

ITEM NO.	PART	SUPPLIER	SPECIFICATION	MODELS
	Brake caliper	BBCARGO		Flex Rider / Easy Rider
	Brake grip	BBCARGO		Flex Rider / Easy Rider
50100240	Brake pad	BBCARGO		Flex Rider / Easy Rider
50000055	Brake disc (front)	BBCARGO	180 mm	Flex Rider / Easy Rider
50000420	Battery	Shimano	Battery Unit BTE8010 504Wh	Flex Rider / Easy Rider
50000425	Sensor magnet	Shimano	Model KEWSS300L760A	Flex Rider / Easy Rider
50000435	Brake disc (rear)	Shimano	Centerlock SMRT70	Flex Rider / Easy Rider
50000460	Cables	Shimano	Electric Wire EWSD300 300mm	Flex Rider / Easy Rider
50000465	Cables	Shimano	Electric Wire EWSD300 1400mm	Flex Rider / Easy Rider
50100130	Front tire	Schwalbe	Schwalbe Pick Up 20"x2.15 Front Tire	Flex Rider / Easy Rider
50100135	Front tube	Schwalbe	Schwalbe AV7AP Air Plus Hose Front	Flex Rider / Easy Rider
50100140	Rear tire	Schwalbe	Schwalbe Pick Up 26"x2.15 Rear Tire	Flex Rider / Easy Rider
50100145	Rear tube	Schwalbe	Schwalbe AV13AP Air Plus Hose Rear	Flex Rider / Easy Rider
50000000	Pedal	Showoku	Exustar E-PC945 Non-Slip Pedal Set	Flex Rider / Easy Rider
10540170	Saddle	BBCARGO	Pro Soft saddle VL-3061	Flex Rider / Easy Rider
50000030	Saddle clamp	BBCARGO	34,9 mm	Flex Rider / Easy Rider
50100160	Ringlock	ABUS	ABUS 5650L Shield ring lock	Flex Rider / Easy Rider
50000135	Handle grip	BBCARGO	130/95 cm	Flex Rider / Easy Rider
50000255	POM Block	BBCARGO	Tilt lock adjustment block	Flex Rider
50000335	Fender support	BBCARGO		Flex Rider / Easy Rider